

## Room Controller User Guide

You can find information over the following pages about how to operate the ModuSat Room Controller in your home.

### Key to Symbols

The following symbols for the operating modes are shown to the left hand side of the screen on the Room Controller -



### Description of Operating Modes

#### Comfort (ON)

Comfort mode should be set to the temperature required when the home is occupied. (Recommended temperature setting is 21°C)

#### Reduced (OFF)

Reduced mode should be set to the minimum temperature required when the home is not occupied. (Off) (Recommended temperature setting is 15°C)

#### Anti-freeze

Anti-freeze is factory set at 10°C. This mode should be selected to provide frost protection when the property is unoccupied for long periods. (Note: Anti-freeze disables the heating mode unless the temperature falls below the set 10°C)

#### Summer (Summer mode only applicable to cooling models)

When Summer mode is selected the heating is disabled with hot water provision only.


#### Winter

When Winter mode is selected both heating and hot water provision is available.



Use button "F" (Function) to change the operating mode. (Summer / Winter mode is only applicable to cooling models).


## ModuSat Room Controller

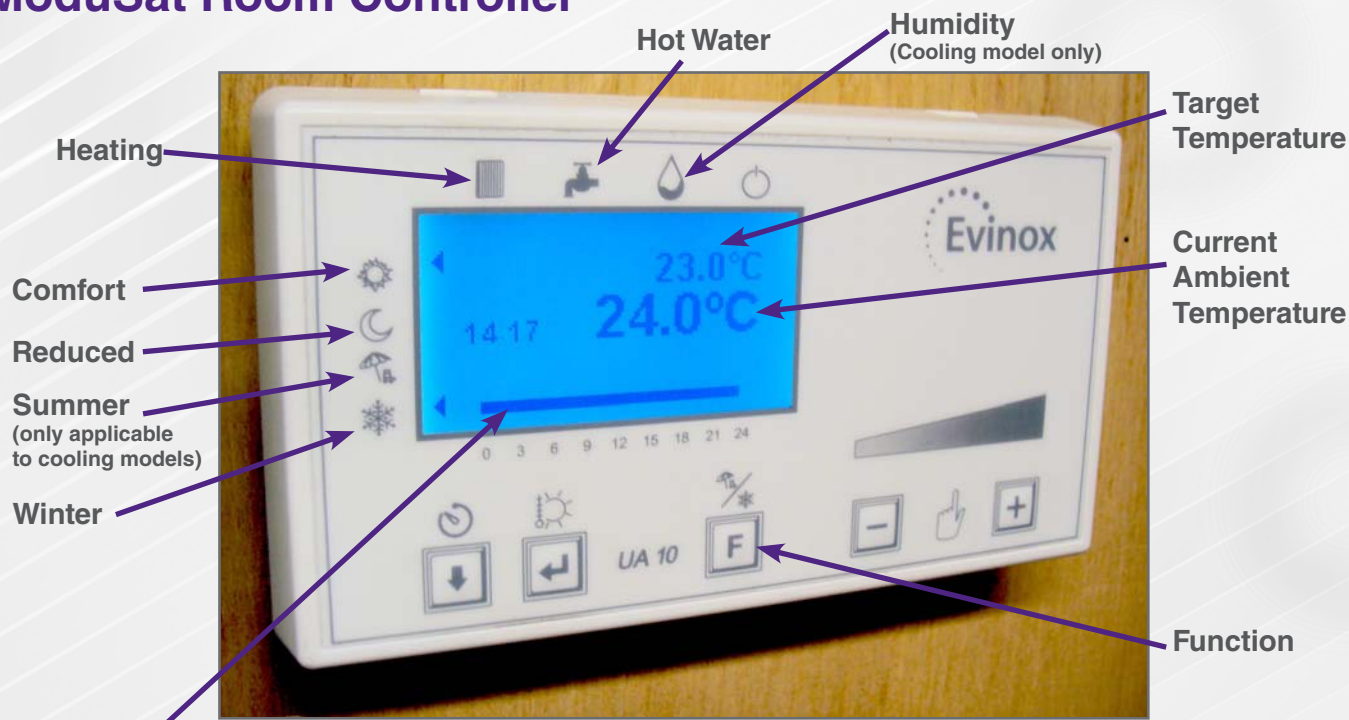


The blue line indicates which programme mode(s) is selected.

## Parameter Setting

This operation allows the user to set the temperature set point for comfort, reduced, anti-freeze and HW, that will follow the daily or weekly set time schedule.

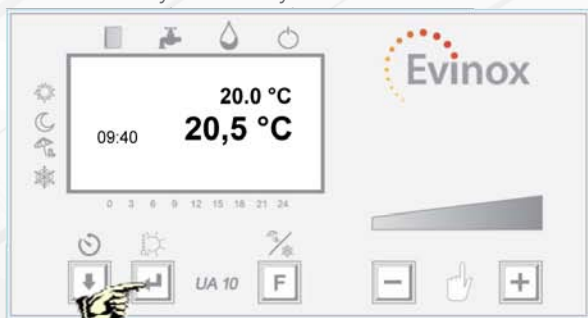


1

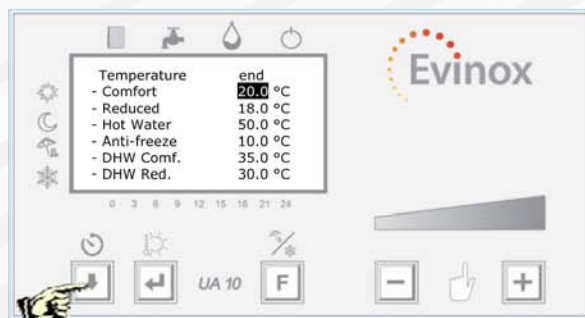


2

Press and hold down 'ENTER' for more than 3 sec

Use the 'Down Arrow' to select a parameter

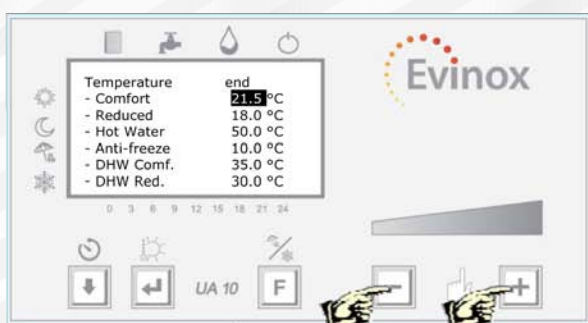

3

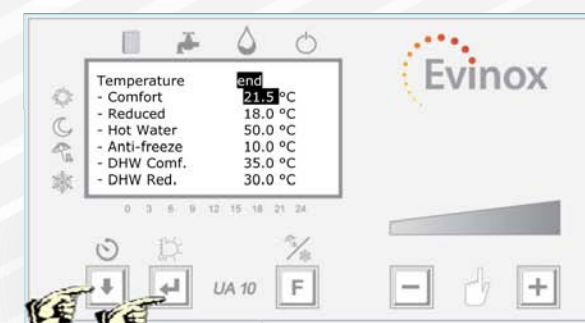

4


Use the '-' or '+' buttons to decrease or increase the value  
(Note: DHW Conf. & DHW Red. are pre-set & should NOT be adjusted)

Scroll through using the 'Down arrow' until 'end' is highlighted and press 'ENTER' to exit the screen


The temperature set point can be changed using the '+' or '-' buttons. The set temperature can be changed within +/- 3 °C.

## Time Schedule Programming

The time schedule can be set to control the comfort, reduced or antifreeze operation of the system.

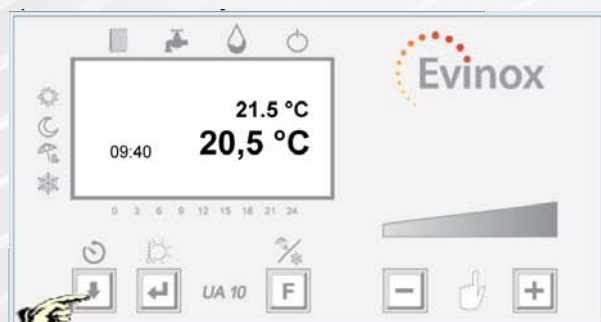


1

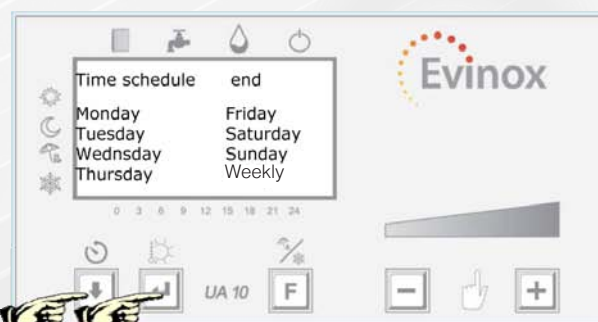


2

Press and hold the 'Down Arrow' button for more than 3 sec

Use the 'Down Arrow' button to select a day and press 'ENTER'

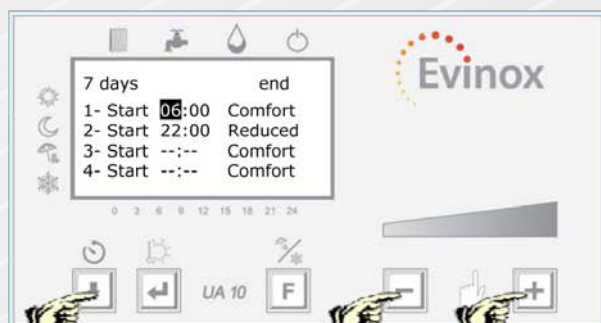

3

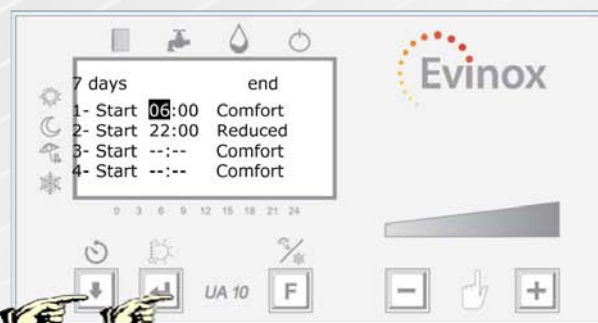

4

Use the '-' or '+' buttons to change the time (24hr Clock)


Scroll through using the 'Down arrow' until 'end' is highlighted and press 'ENTER' to exit the screen

**Please Note: You must select the operating mode, as shown over the page, to activate the time schedule programme. (For example, if you have selected a weekly programme you must select the "Weekly" mode in the "Set Mode" screen)**




## Operating Mode Selection

This operation allows the user to set the operating mode: comfort, reduced, daily, weekly, anti-freeze, clock date and time. (DHW= Domestic Hot Water)

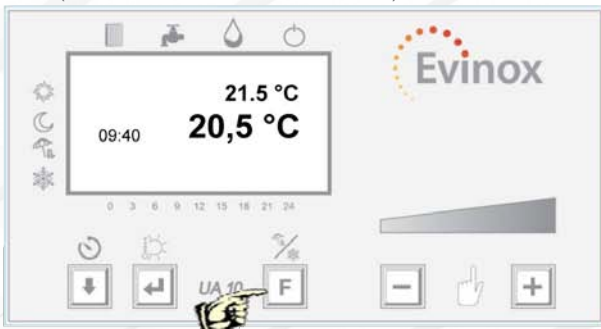


1

Press 'F' to enter the menu

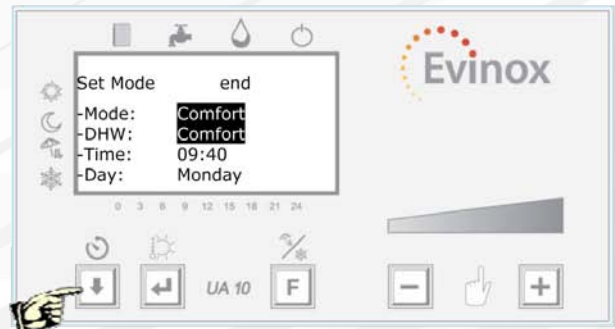

2

Use the 'Down Arrow' to scroll down and select a parameter

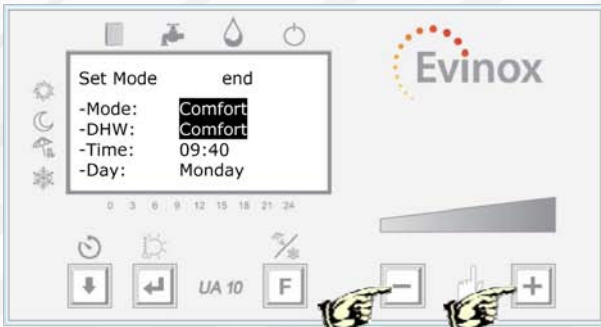

3

Use the '-' or '+' buttons to change the value




4

Scroll through using the 'Down arrow' until 'end' is highlighted and press 'ENTER' to exit the screen


## Reading Your Consumption Figures

The user can read the consumption figures for the unit, for example: C for heating, C1 cooling (when present) and C2 cold water (Only when a cold water meter is installed within the dwelling and connected to the Evinox system) The display also shows the temperature and flow rate related to the three counters.

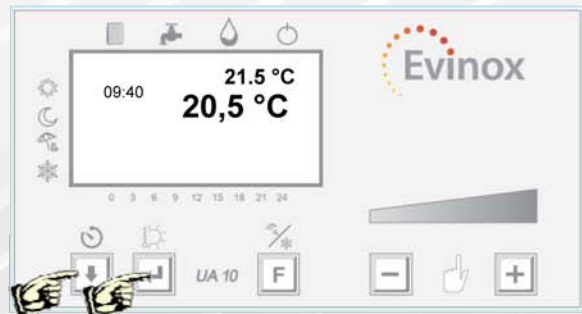

1

Press and hold 'ENTER' and the 'Down Arrow' button together for more than 3 sec

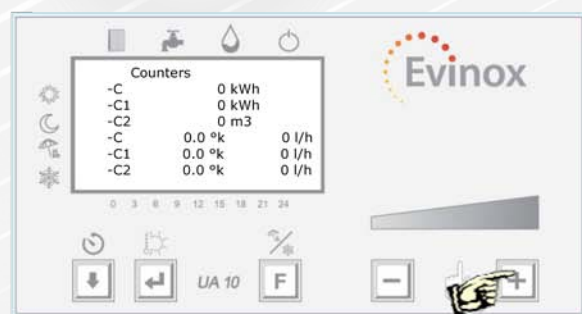

2


Press the '+' button to view the card consumption screen

Screen 3 & 4 below are only accessible when the PaySmart prepayment unit is fitted.



3

Press the '+' button to view the tariff information screen (Please note, if you exit this screen you must wait for 15 seconds before pressing the '+' button to get back in)

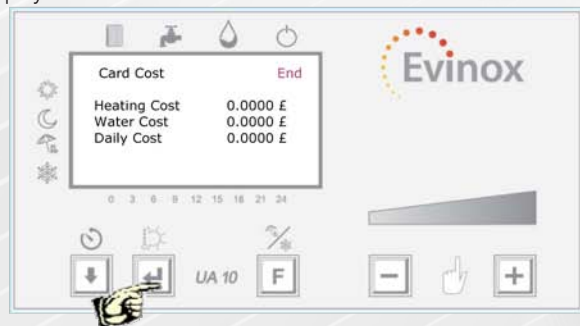

4

Scroll through using the 'Down arrow' until 'end' is highlighted and press 'ENTER' to exit the screen

## Definition of Card Consumption Figures:

**Credit:** The remaining energy credit

**Extra Used:** The amount of emergency credit that has been used

**Extra Max:** The max amount of emergency credit available

**Heating Cost:** The cost of each energy unit (per kwh)